


FORENO.

TAPWARE MADE FOR NEW ZEALAND since 1969

LE TAP

Extractable Spray Sink Mixer Chrome LT121

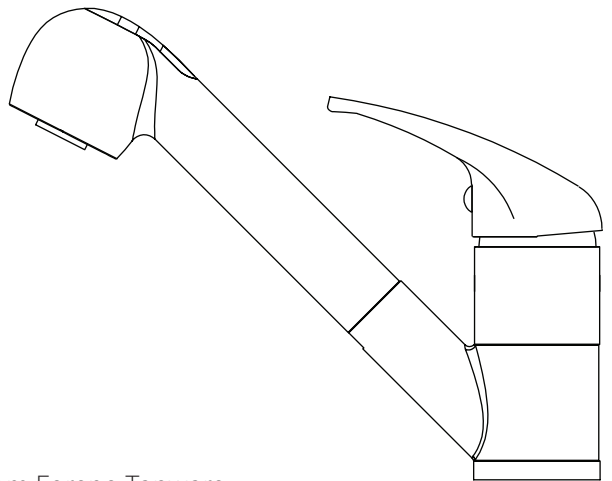

Congratulations on your purchase of this high quality product from Foreno Tapware.
Please read the following before installation and retain (along with your receipt) for future reference.

TECHNICAL SPECIFICATIONS

Suitable for Mains Pressure only

Minimum Pressure = 150kPa

Maximum operating Pressure = 500kPa* (As per NZ Building Code AS/NZ 3500.1)

Maximum operating Temperature = 65 deg. Celsius

For domestic use only.

CONFIGURATION

Mains Pressure systems Install as supplied.

Unequal Low Systems Not suitable.

Equal Low systems Not suitable.


INSTALLATION

***FOR PRESSURES EXCEEDING 500kPa INSTALL A PRESSURE REDUCING VALVE. THOROUGHLY FLUSH ALL PIPES TO ELIMINATE ANY REMAINING DIRT AND RESIDUE, AND INSTALL INLINE FILTERS. FAILURE TO DO SO MAY VOID THE WARRANTY.**

- SEE DIAGRAM ON FOLLOWING PAGE.
- NB: Do not use thread tape on connections that have rubber washers or O-rings. Do not over tighten connections.
- Drill **38mm** size hole in bench. If fitting on stainless steel benchtop, ensure no sharp edges or burrs remain on hole in bench top.
- Fit rubber O-ring (1) into recess in base of mixer.
- Screw threaded rods (4) into base of mixer and feed the Pull-out hose (C) through the Spout housing (B).
- Screw long flexihoses (7) into H and C ports in base of mixer. Screw short flexi (6) into outlet port.
- Align Spout and lever with hole in the base of the mixer that pull-out hose runs through.
- Position mixer in hole, keeping hose, spout and lever aligned. Ensure it is centered correctly over hole, and make sure the O-ring (1) is in place between tap and bench top, and that a waterproof seal exists.

ATTACH PROOF OF PURCHASE HERE

- Slide rubber gasket and horse shoe clamp onto threaded rods. Fit Retaining nuts (5) onto threaded rods and anchor mixer to bench securely by firmly tightening nuts.
- Ensure the washer (10) is present between reducing socket (9) and Non return valve (11). Tighten fully.
- Fit small washer (8) into nut of outlet flexi (6), and screw end of reducing socket (9) into nut.
- Fit washer (12) into end of non-return valve (11), and screw swivel coupling (13) into place.
- Connect the hot and cold flexi's (7) to water supply.
- Attach the Pull-out spout (A) to the conical nut end of the extractable spray hose. NB: Do not use thread tape on the end of the handpiece. Do not overtighten the handpiece onto the hose.
- Attach the hose weight (14) onto the pull-out hose (C) at least 50mm above bottom of looped hose.
- **Check that there are no obstructions to the hose or weight when pulling handpiece in and out, and that the hose is not twisted.** The hose should not be wrapping around the flexihoses or other underbench hoses, or pipework.
- An in-line filter should be installed on the cold water inlet of ceramic mixers (at the point of hose coupling) to ensure longer cartridge life. Failure to do so may void the warranty.
- Turn on water supply. Check for leaks.

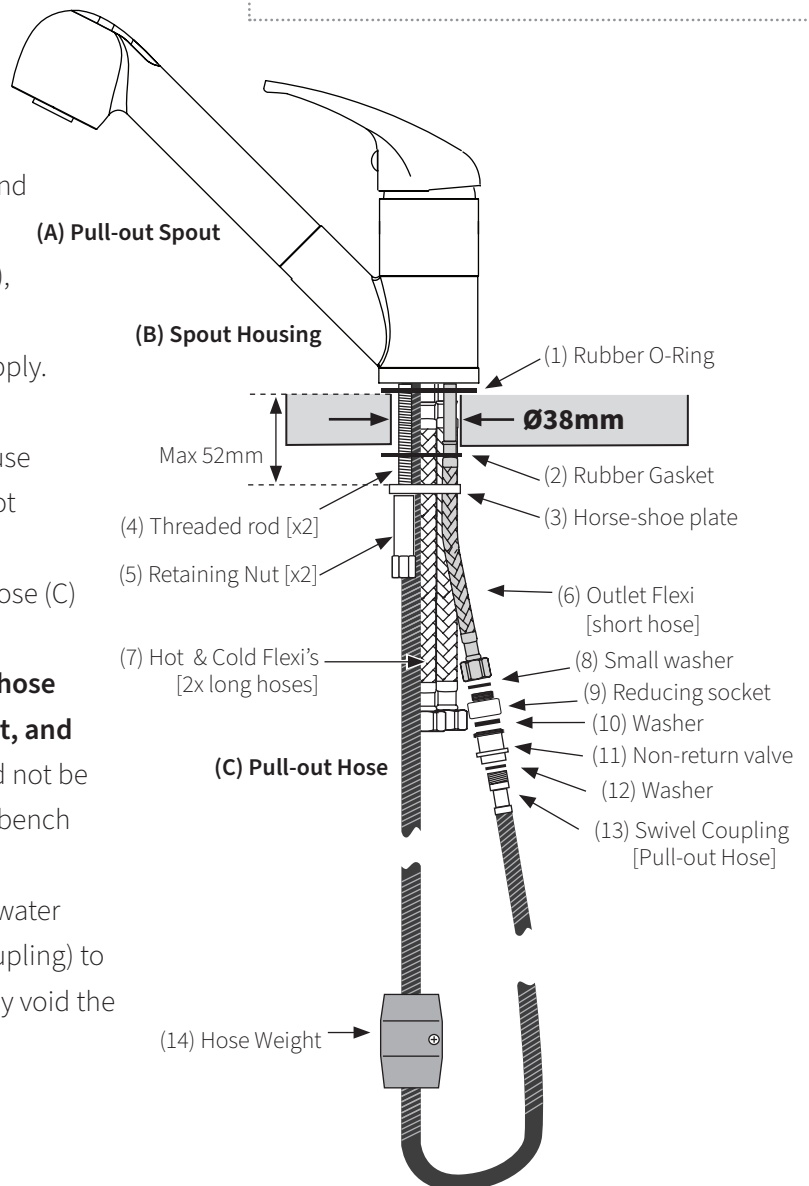

WARRANTY

PLEASE CALL US BEFORE REMOVING TAPWARE OR UNDERTAKING ANY REPAIR WORK.

Please refer to our website for warranty information: www.foreno.co.nz/warranty

In the unlikely event that this product fails during its warranty period, phone our Customer Service team immediately on 0508 FORENO (0508 367 366) – as unauthorised removal of the product may void the warranty.

CARE AND MAINTENANCE

SHOULD NOT BE CLEANED WITH ACIDIC, CAUSTIC/ALKALINE, ABRASIVE OR CITRIC CLEANERS.

A soft, damp cloth is recommended for cleaning (Not a Micro fibre cloth). Mild soap solutions can also be used on occasion.

PROUD PARTNER AND SUPPORTER OF MASTER PLUMBERS, GASFITTERS AND DRAINLAYERS

